

# Setting an Auto Damper



1 - Press both step keys, front and back, at the same time.



2 – Damper:C (closed) will be displayed.



3 – Press the step key again, which will show the temperature the damper will close at. \*



4 – Press the step key and Damper:0 (open) will be displayed.



5 - Press the step key again, which will show the temperature the damper will open at. \*



6 – Press the step key and the controller will restart, saving what you've just set.

\*To change any value, use the up and down arrows.